



BLACK OUTSIDE. YELLOW INSIDE.
TOUGH ALL OVER!

Attaching a tripod to the front of the ACPRO3500

The front flap on the front of the ACPRO3500 has a small tripod icon on it. This icon indicates where the "hidden pocket" for your tripod is.

Please reference the photos and follow the numbered steps to properly attach your tripod to the ACPRO3500.

1. Insert your finger under one side of the tripod flap (there is a small piece of velcro on the bottom in the center of the flap).
2. Move your finger behind the pocket that you feel and slowly pull down the pocket.
3. Pull the front of the pocket so it is open.
4. Place the tripod in the pocket and put the top strap that is on the top front of the back around the tripod.
5. Follow instructions on the next page for securing/tightening the tripod strap.



www.apecase.com



BLACK OUTSIDE. YELLOW INSIDE.
TOUGH ALL OVER!™

Tightening the tripod strap on the ACPRO3500

Always make sure the tripod is secure before putting the backpack on your back.

Please reference the photos and follow the numbered steps to properly secure/tighten the top tripod strap.

1. There is a clasp on the strap for adjusting and securing the length of the strap.
2. Pull the front flat part of the clasp away from the strap.
3. Pull the loose end of the strap away from the clasp to tighten the strap.
4. Once the strap is tight and the tripod is secure with little wiggle room close the clasp.

****When placing larger tripods into the tripod pocket you will want to adjust the strap to it's longest allowed amount then clip the tripod in and follow steps 2-4.**

